

INFORMATION ANNOUNCEMENT


ENGINE WATER PUMPS

Water Pumps listed below do not come with a Gasket in the box. These Water Pump part numbers REQUIRE Gasket Sealant (FIPG) for installation. Please read our Water Pump Installation Procedure Bulletin found on our website. *Scan QR Code 1 to download the Installation Bulletin.

> **WPN-089** WPN-700 WPN-800 WPT-801

WPG-020 **WPG-027 WPG-028**

The Gasket images below, found in many AISIN Water Pumps, DO NOT require any type of sealant, grease, glue or adhesive when being installed. Gasket and/or O-Ring Seals must be installed on clean surfaces and it's recommended they are coated with New Coolant before installation. *Scan QR code 2 to watch Water Pump Gasket Video.

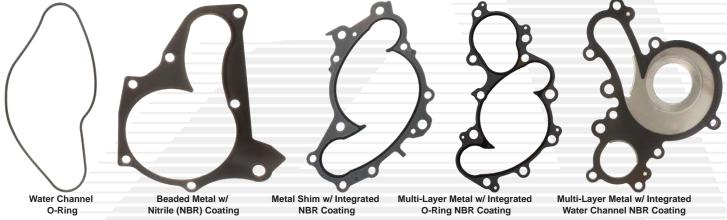



may void the warranty on these applications

