



!CAUTION: Read These Instructions Prior to Installing the Contents in this Box!

1. Verify Auto Tensioner Locating tab is mounted in correct position

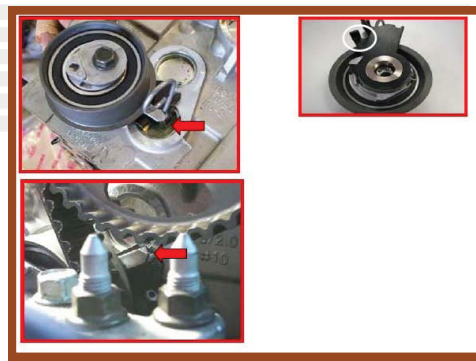

2. Check the alignment of the timing marks on each sprocket.
3. Remove the pin fixing the tensioner arm.
4. Using a hex wrench, turn the adjuster counterclockwise to make the indicator of the arm (A) located at the center of the base notch.

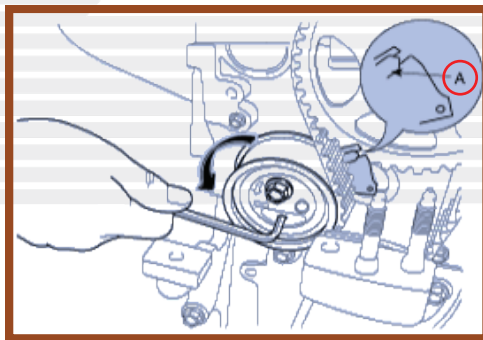

Caution

DO NOT rotate the adjuster clockwise!

This will cause the Auto-Tensioner to Function Improperly.

AISIN